名	称	R103V(英文)说明书		东莞市漫步者科技有限公司	
材	质:	80克书纸			
尺	寸:	127×127 (MM)	校	对:	
版本号及料号:		V1. 0/IB-200-R0103V-00	批	准:	

IB-200-R0103V-00 说明书R103V/英文

Manual Edition 1.0, Dec. 2017

IB-200-R0103V-00

Suit 2207, 22nd floor, Tower II,Lippo centre,

EDIFIER

Multimedia Speaker

User manual

89 Queensway Hong Kong Tel: +852 2522 6989 Fax: +852 2522 1989 www.edifier.com
© 2017 Edifier International Limited. All rights reserved. NOTICE: For the need of technical improvement and system upgrade,information contained herein may be subject to change from time to time without prior notice.

Products of EDIFIER will be customized for different applications. Pictures and illustrations shown on this manual may be slightly different from actual product. If any difference is found, the actual product prevails.

- ${\it 1. Please read the instructions carefully. Keep it in safe place for future \ reference.}\\$
- Use only accessories approved by the manufacturer.
 Install the instrument properly by following the instructions in the device connection section.
- 4. Using the product in a 0-35 °C environment is recommended.
- 5. To reduce the risk of fire and electric shock, do not expose the product to rain or moisture.6. Do not use this product near water. Do not immerge the product into any liquid or have it exposed to dripping or splashing. 7. Do not install or use this product near any heat source (e.g. radiator, heater, stove, or other devices that generate heat). 8. Do not place any object filled with liquids, such as vases on the product; neither should any open fire, such as lighted candles be placed on the product.
- 9. Do not block any ventilation openings. Do not insert any object into ventilation openings or slots. It may cause fire or electric 10. Keep sufficient clearance around the product to maintain good ventilation (minimum 5cm is recommended). 11. Do not force a plug into the jack. Before connection, check for blockage in the jack and whether the plug matches the jack and is oriented to the right direction.
- . Keep the provided accessories and parts (such as screws) away from children to prevent from being swa 13. Do not open or remove the housing yourself. It may expose you to dangerous voltage or other hazardous risks. Regardless the cause of damage (such as damaged wire or plug, exposure to liquid splash or foreign object falling in, exposure to rain or moisture, product not working or being dropped, etc.), the repair has to be performed by an authorized service professional 14. Before cleaning the product with dry cloth, always turn off the product and disconnect the power plug first.15. Never use strong acid, alkali, gasoline, alcohol, or other chemical solvents to clean the product surface. Use only neutral

Excessively loud music may lead to hearing loss. Please keep the volume in a safe range.

solvent or clear water for cleaning.

 $Correct\ Disposal\ of\ this\ product.\ This\ marking\ indicates\ that\ this\ product\ should\ not\ be\ disposed\ with\ other\ household$ wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.

English

Important safety instruction

Power warning:

 Place the product near the power outlet.
 Before use, make sure that the operating voltage is the same as your local power supply. Correct operating voltage can be found on the product plate. 3. For safety purpose, unplug the product during lightning storms or when unused for extended periods of time.

4. Under normal conditions, the power supply may get hot. Please keep good ventilation in the area and exercise caution.

This symbol is to alert the user to the presence of un-insulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons. This symbol is to warn the user not to disassemble the enclosure of the product and there is no user-replaceable

part inside. Take the product to an authorized service center for repair. This symbol indicates that the product is for indoor use only.


2 English


This symbol indicates that the product is a CLASS II or double insulated electrical device with no earth requirement.

 $\label{thm:main} \mbox{The MAINS plug is used as the disconnect device, the disconnect device shall remain readily operable.}$

5. Safety warning labels on the housing or bottom of the product or power adaptor.

What's In The Box Box Contents: Subwoofer Satellite speaker Satellite speaker 3 English

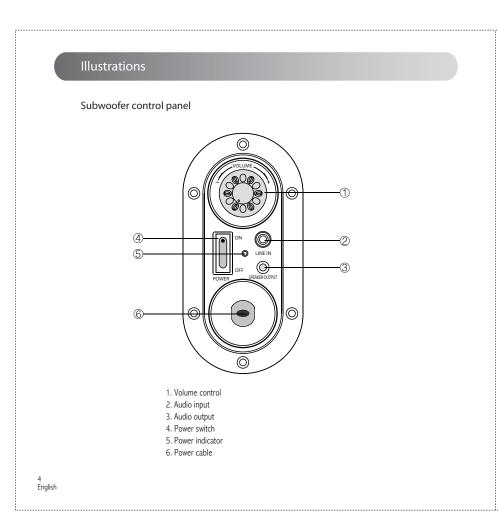

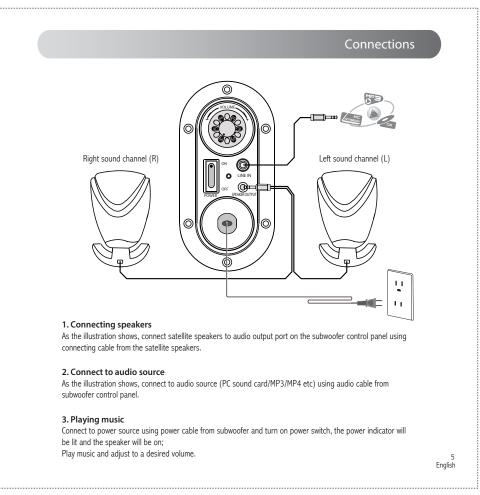

Specifications

R/L: 2W+2W SW: 4W Power output: ≤ 25dB(A) Noise level: Frequency response: 70Hz~20KHz Bass unit: 4 inch (106mm) Treble unit: 2 3/4 inch (73mm) Input: Line in

There are no restrictions of use.

Troubleshooting

Problem	Solution		
No sound	Check if the power indicator light is ON.		
	Try to turn up the volume using the master volume control.		
	Ensure the audio cables are firmly connected and the input is set correctly on the speakers.		
	Check if there is a signal output from the audio source.		
The R103V does not turn on	Check if main power is connected, or if the wall outlet is switched on.		

To learn more about EDIFIER, please visit www.edifier.com For Edifier warranty queries, please visit the relevant country page on www.edifier.com and review the section titled Warranty Terms.
USA and Canada: service@edifier.ca

South America: Please visit www.edifier.com (English) or www.edifierla.com (Spanish/Portuguese) for local contact information.

6 English English