

EDIFIER

W360NB

Bluetooth Active Noise Cancelling Stereo Headphones

EDIFIER International Limited
www.edifier.com
© 2017 Edifier International Limited. All rights reserved.
Printed in China

NOTICE:
For the need of technical improvement and system upgrade, information contained herein may be subject to change from time to time without prior notice.
Products of EDIFIER will be customized for different applications. Pictures and illustrations shown on this manual may be slightly different from actual product. If any difference is found, the actual product prevails.

Ver 1.0 EB-200-W360NB-01

Operating instructions

1. Tips:

- When adjust the volume to the maximum, you will hear a prompt tone.
- When use the voice dial, please ensure that your mobile phone supports this function and enable this status.

4.2 Make three way call

Function	Headphone status	Operation
End the current call to answer the incoming call	Press the second incoming call	Press the multifunction key Q for about 5 seconds
Answer the current call to answer the previous incoming call	Press the second incoming call	Double press the multifunction key Q
Call switching	Answering	Double press the multifunction key Q
Answering call and switch to the answered call	Answering	Press the multifunction key Q

4.3 Connect call between two mobiles

Function	Headphone status	Operation
End the first mobile call, connect the second mobile incoming call	Press the first mobile is taking the second mobile hanging incoming call	Press the multifunction key Q
Answer the first mobile call, answer the second mobile incoming call	Press the first mobile is taking the second mobile is taking incoming call	Double press the multifunction key Q
Switch calls and end the current call	Answering a call is answered	Double press the multifunction key Q
Return to the remained mobile	Answering a call is answered	Press the multifunction key Q

Note: If iOS system phones cannot answer incoming call from the second phone after double-clicking on the first phone when the first phone is in conversation, please repeat the double-clicking to transfer to conversation on the second phone. It is caused by CSR chip setting limitation, not the function defect of headphones.

5. Play music

Function	Headphone status	Operation
Previous volume	Play music	Press the "A" key
Decrease volume	Play music	Press the "V" key
Previous track	Play music	Press and hold the "V" key
Next track	Play music	Press and hold the "A" key
Pause playing	Play music	Press the multifunction key Q
Resume playing	Pause playing	Press the multifunction key Q

1

FR Conseils de Sécurité!

Pour votre sécurité, ne portez pas et ne posez pas ce casque à proximité immédiate (moins de 10 cm) d'un pacemaker.

Ne pas introduire la fiche à jack dans des prises de courant.

Surveillez vos enfants s'ils utilisent l'appareil. Ce produit n'est pas un jouet.

Un casque d'écoute utilisé à un volume élevé risque de provoquer de troubles de l'audition, en particulier s'il est porté de façon prolongée.

Lorsque vous procédez à un réglage sur votre installation hi-fi ou que vous branchez le casque sur l'installation, des bruits dangereux pour l'oreille peuvent se produire si le son est réglé sur un volume élevé. Pour cette raison, il faut toujours mettre le son au minimum avant de passer d'une source à l'autre (radio, platine, lecteur de CD ...) ou de brancher le casque.

Pour ne pas mettre en danger votre sécurité au volant ni celle des autres usagers de la route, n'utilisez jamais le casque lorsque vous conduisez ou que vous roulez à vélo.

11

ES ¡Atención!

Por su propia seguridad, procure no llevar ni guardar estos auriculares muy cerca de su marcapasos (a menos de 10cm).

No introducir el conector jack en los casquillos conductores de corriente.

Vigile a sus hijos al utilizar el equipo. Este producto no es un juguete.

La utilización de auriculares a un volumen muy alto – sobre todo al utilizarlos durante largos periodos – puede conducir al deterioro del oído.

Al operar los interruptores de su sistema HiFi o al conectar los auriculares al sistema puede hacer clic, lo que a un volumen muy alto puede deteriorar el oído. Por lo tanto disminuya el nivel de volumen al mínimo al seleccionar entre diferentes fuentes (radio, tocadiscos, reproductor de CD ...) en su sistema HiFi o al conectar los auriculares.

Para no poner en peligro ni su capacidad de conducir, ni la seguridad de otros usuarios de la vía pública, no utilice en ningún caso sus auriculares al conducir un vehículo o al andar en bicicleta.

17

EDIFIER

W360NB

Bluetooth Active Noise Cancelling Stereo Headphones

Operating instructions

6. Restore factory settings

Under Bluetooth searching status (red/blue light quickly flashes alternately), press and hold the volume increasing key A and volume decreasing key V at the same time for 5 seconds; Connect headphone to USB port of computer or USB power adapter using charging cable. It indicates that headphone restore successfully when red light is lit. It will clear the device list that headphone paired before, after successful clear with it, turn on the headphone, it will automatically enter into pairing status.

■Maintenance

- Do not place the product at the damp places to avoid affecting internal circuit.
- Do not place the product at the places exposed to sun or in high temperature. High temperature will shorten the service life of electronic components, damage battery and make some plastic components deformed.
- Do not place the product in very cold places to prevent damaging the internal circuit board.
- Do not try to dismantle the product. The non-professional personnel may damage the product.
- Do not fall, vibrate strongly, strike the product with hard object to prevent damaging the internal circuit.
- Do not use drastic chemical products or cleaner to clean the headphones.
- Do not use sharp objects to scratch on the product surface to prevent damaging the outer case and affecting looking.

If the product cannot work normally, please send it to your qualified repair agency, the staff will warmly help you solve the problem.

6

IT Attenzione!

Al fine di garantire la sicurezza personale, fare attenzione che questo cuffie non siano posizionate in prossimità del proprio eventuale pacemaker (con una distanza inferiore a 10 cm).

Non introdurre la spina jack in una presa sotto tensione.

Sorvegliare i bambini quando utilizzano il dispositivo. Questo apparecchio non è un giocattolo.

L'utilizzo delle cuffie ad alto volume, soprattutto se prolungato, può danneggiare l'udito.

Maneggiare le manopole del Vostro sistema hi-fi o inserire le cuffie quando il volume è troppo alto, potrebbe produrre dei rumori che potrebbero danneggiare l'udito, soprattutto se il volume è alto. Si consiglia pertanto di regolare il volume al minimo prima di passare da una fonte all'altra (radio, giradischi, lettore CD, ecc.) o prima di collegare le cuffie.

Per la sicurezza nel traffico, si prega di non usare mai le cuffie mentre si guida o si va in bicicletta.

12

RU Предупреждение!

В целях гарантии вашей безопасности просим не надевать и не держать наушники вблизи (ближе 10 см) кардиостимулятора.

Запрещается вставлять штекер в электрические розетки.

При использовании прибора присматривайте за детьми, так как это оборудование не является игрушкой.

Прослушивание музыки через наушники на высокой громкости, особенно длительное время, может навредить вашему слуховому аппарату.

Включение и выключение переключателей на высококачественной системе воспроизведения или подключение наушников может привести к возникновению щелчков, которые на высокой громкости могут нанести вред вашему слуховому аппарату.

Таким образом, всегда устанавливайте громкость на минимальный уровень, прежде чем производить переключение между различными источниками (тuner, диск проигрывателя, CD-проигрыватель и т.д.) или подключать наушники в систему.

Для безопасности дорожного движения не используйте наушники во время езды на велосипеде и вождения автомобиля.

18

Tips: Before use the headphone, please carefully read this user manual and keep it for further reference.

■Features:

- Slitless, around-neck design of streamlined shape
- 13mm drivers for exceptional audio performance
- Active Noise Cancelling (ANC) technology greatly reduces background noise
- Long-lasting battery supports up to 15 hours playback
- On-board mic and remote for phone calls, music switching and volume control

■Specifications:

Bluetooth version: Bluetooth V4.1
Bluetooth profiles: HSP/HFP/A2DP/AVRCP
Effective distance: 10m
Working time: 15 hours
Standby time: About 500 hours
Input: DC 5.1V (max 100mA)
Charging time: About 2.5 hours
Frequency response: 20Hz-20KHz
Sensitivity: 108±3dB
Impedance: 32Ω

Note: The design and specifications may be changed without prior notice in order to make improvements.

■FAQs

- The red light flashes instead of the blue light.
Answer: It means that the headphone battery is low. You need to recharge the headphones.
- The red light is off during charging.
Answer: a. Please ensure the charging device is properly connected with the headphone.
b. When the headphone is not used for a long time, the battery will enter the hibernation status. Now it needs to charge about 30 minutes and then the red light shall be on.
- No sound from the headphone.
Answer: a. Confirm if the headphone volume is an available level.
b. Confirm if the headphone is properly connected to mobile.
c. Confirm the headphone and mobile phone is in an effective distance and there is no obstacle between the headphone and mobile phone.
- Headphone is not good for talking.
Answer: a. Please ensure if your mobile phone is in the area with strong signal.
b. The effective operational distance of the headphone is 10m. Please ensure the headphone is within effective operational distance and there is no obstacle between the headphone and mobile phone.
- Why can't the headphone pause, restore, songs control when playing music?
Answer: The function requires the device paired with the headphone to support AVRCP (Audio Video Remote Control Profile) protocol.

7

ID Peringatan!

Untuk menjamin keselamatan diri Anda, jangan memakai atau menyimpan earphone di sekitar (dekad dari 10 cm) alat pacu jantung.

Jangan masukkan steker ke stopkontak listrik.

Awasi anak-anak saat menggunakan peralatan, produk ini bukan mainan.

Mendengarkan earphone pada tingkat volume tinggi – khususnya, selama waktu yang lama – dapat merusak pendengaran Anda.

Penggunaan sakelar pada sistem hi-fi Anda, atau penyumbatan pada earphone dapat menimbulkan klik yang pada pengaturan volume tinggi dapat memengaruhi pendengaran Anda.

Karena itu, selalu mengatur kontrol volume paling rendah sebelum beralih di antara berbagai sumber (penala, pemutar piringan hitam, pemutar CD, dll) atau penyumbatan pada earphone.

Untuk keselamatan lalu lintas, jangan gunakan earphone selama mengemudi atau berkendara.

13

SA !تحذير!

لضمان سلامتك الشخصية، يرجى عدم ارتداء سماعات الرأس أو الاحتفاظ بها بالقرب من (أقرب من 10 سم) جهاز تنظيم ضربات القلب.

لا تتركّل القابس في مأخذ أبرأية.

احرص على الإشراف على الأطفال عند استخدام الجهاز، فالمنتج ليس لعبة.

الاستماع من خلال سماعات الأذن عند مستويات الصوت العالية، خاصة على مدى فترات طويلة، قد يضر بسمعك.

تشغيل المفاتيح في نظام واي فاي الخاص بك أو إدخال سماعات الرأس قد يسبب نقرات والتي قد تؤثر على مستويات الصوت العالية.

لذلك، قم دائما بضبط زر التحكم في مستوى الصوت على الحد الأدنى قبل التبديل بين المصادر المختلفة (مؤلف، قوس دوران، مشغل الأقراص ممجمة، إلخ) أو عند توصيل سماعات الرأس من أجل السلامة المرورية، لا تستخدم سماعات الرأس أثناء السفر في النظام.

19

■Box content

1. Accessories

■How to wear

- Make headphone cable downward, and from the rear neck wear ear hook;
- Properly insert headphones into ears and adjust to a comfortable status.

CAUTION

Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.

A warning that batteries (battery pack or batteries installed) shall never be exposed to excessive heat such as sunshine, fire or the like.

- "To prevent possible hearing damage, do not listen at high volume levels for long periods."
- "Fully understand user manual before use."
- "Turn your player at low volume levels or power off before you leaving."

Correct Disposal of this product. This marking indicates that this product should not be disposed with other household waste. It is responsible to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

8

NL Waarschuwing!

Om uw persoonlijke veiligheid te garanderen, dient de koptelefoon niet te worden bewaard of gedragen in de buurt van (minder dan 10 cm) een pacemaker. Steek de stekker in een stopcontact.

Houd toezicht op kinderen tijdens het gebruik van het apparaat; dit product is geen speelgoed.

Luisteren met de koptelefoon op hoog volume – met name gedurende een langere periode – kan leiden tot schade aan uw gehoor.

De bediening van de schakelaars op uw hi-fysysteem of het insteken van uw koptelefoon kan leiden tot harde klikgeluiden wat uw gehoor kan aantasten.

Om deze reden dient de volumeknop altijd op een minimum te worden geschakeld, voordat er tussen de verschillende bronnen (tuner, draaitafel, cd-speler, enz.) wordt geschakeld of de koptelefoon wordt aangesloten.

Met het oog op verkeersveiligheid dient de koptelefoon niet te worden gebruikt tijdens het rijden of fietsen.

14

JP 安全指摘事項!

安全のために、このヘッドフォンスメカの近く(10cm以内)で使用または保管することは避けください。

差し込プラグをコンセントに差し込まないようにしてください。

お子様が使用になる場合は、必ず大人が付き添ってください。本製品は玩具ではありません。

大きな音量のヘッドフォンの使用は、特に長時間使用する場合において聴覚障害の原因となる恐れがあります。

HiFi機器の切り替え時、あるいは機器にヘッドフォンを接続する際に、音量が大きき場合にはガリガリという騒音が発生し、聴覚に悪影響を与える恐れがあります。HiFi機器で各ソース(ラジオ、レコードプレーヤー、CDプレーヤー)を選択の際、あるいはヘッドフォンを接続する際には、音量のつまみを常に最少にしてください。

安全なドライブ、そして他の運転手の安全のためにも、お車を運転する場合、あるいは自転車に乗る場合にはヘッドフォンは絶対に使用しないでください。

20

■Operation instructions

1. Charging

During using, red indicator instead of blue indicator blinks, it indicates low battery level, please use it after fully charged.

- Insert USB charging cable into USB socket of standard power source.
- Connect the other end to microUSB charging port on the headphone.

Red light constantly lit = charging red light off, blue light constantly lit = fully charged
Charging time: about 2.5 hours for a full charging

Tips:
Before the first time use, recommend to fully charge the battery to avoid shortening the battery life; please charge the battery at least once per three months when unused the headphone for a long time.

Warning:
The rechargeable batteries that provide power for this product must be disposed properly for recycling. Do not dispose of batteries in fire to prevent an explosion.

2. Power ON/OFF

Function	Operation	Indicator
Power On	Press and hold the multifunction key Q for 3 seconds	Blue light constantly lit for 3 seconds
Power Off	Press and hold the multifunction key Q for 4 seconds	Red light constantly lit for 3 seconds
Music cancelling on	Click right switch to "ON"	Blue light constantly lit
Music cancelling off	Click right switch to "OFF"	Blue light off

EN Warning!

To guarantee your personal safety, please do not wear or keep earphones in the vicinity (closer than 10cm) of a pacemaker.

Do not insert plug into electric sockets.

Supervise children when using the equipment, the product is not a toy.

Earphone listening at high volume levels – particularly, over extended periods of time – may damage your hearing.

The operation of switches on your hi-fi system or plugging in the earphones may cause clicks which at high volume setting may affect your hearing. Therefore, always set the volume control to minimum before switching between different sources (tuner, turntable, CD player, etc.) or plugging in the earphones.

For traffic safety, do not use earphones while driving or cycling.

9

KR 경고!

안전상의 이유로 이 헤드폰은 심장박동 조절장치 근처 (10cm 이내)에 두어서는 안됩니다.

잭 플러그를 전류가 흐르는 소켓에 삽입하지 마십시오.

어린이가 헤드폰을 사용할 때는 보호자의 주의 깊은 관찰이 필요합니다. 이 제품은 장난감이 아닙니다.

헤드폰을 높은 볼륨상태에서 특히 장기간 사용할 경우 청각에 해가 될수 있습니다.

하이파이 오디오 시스템상에서 스위치를 바꾸거나 헤드폰을 하이파이 오디오 시스템에 연결할 경우 높은 볼륨상태에서는 청각에 해를 줄수 있는 클릭소리가 날수 있습니다. 그러므로 하이파이 오디오 시스템상의 한스스기에서 다른 스투스기(라디오, 레코드 플레이어, CD 플레이어)를 선택하거나 헤드폰을 연결시킬 경우에는 항상 볼륨을 초저상태로 조정해 놓으십시오.

이러한의 운영상태와 다른 운전자들의 안전을 보호하기 위해 운전 중이거나 자전거를 타고 이동할 시에는 헤드폰 사용을 삼가해 주십시오.

15

PL Ostrzeżenie!

Aby zapewnić sobie bezpieczeństwo, nie należy nosić ani trzymać słuchawek w pobliżu (w odległości mniejszej niż 10cm) od rozrusznika serca.

Nie wkładać wtyczki do gniazdka elektrycznego.

Nadzorować dzieci podczas korzystania ze sprzętu, produkt to nie zabawka.

Słuchanie w słuchawkach przy wysokich poziomach głośności, szczególnie przez długie okresy czasu, może spowodować uszkodzenie słuchu.

Działanie przelączników w systemie hi-fi lub podłączanie słuchawek mogą powodować mocne impulsy dźwiękowe, które przy dużej głośności mogą powodować pogorszenie słuchu.

Dlatego należy zawsze ustawiać głośność na minimalnym poziomie przed przełączaniem między różnymi źródłami dźwięku (tunerem, gramofonem, odtwarzaczem CD itp.) lub podłączeniem słuchawek.

Dla zachowania bezpieczeństwa stwa jazdy nie należy używać słuchawek podczas prowadzenia samochodu czy jazdy na rowerze.

21

3. Pairing

3.1 Follow the below operation to make the headphone enter pairing mode:

Function	Operation	Indicator
Enter pairing mode	Press and hold the multifunction key Q for 5 seconds	Red and blue light alternatively blinks

3.2 Keep headphone and Bluetooth device to be connected within 1 meter, the closer the better.

3.3 Enable Bluetooth function in Bluetooth device to search and connect device.

3.4 Select "EDIFIER W360NB" to pair, blue light will blink slowly after successfully connected.

Tips:
* During pairing, pin code for connection is "0000" if needed.
* After paired, headphone will automatically connect to the last connected Bluetooth device next time.
* When beyond effective distance, it will automatically re-connect if return in 10 minutes, blue light will blink once per 8 seconds along with prompt tone.

Connect two Bluetooth devices simultaneously

- Pair headphone with the first Bluetooth device.
- Restart the headphone to enter pairing status and pair with the second Bluetooth device.
- Operate the first Bluetooth device to connect the headphone, then finish to connect two Bluetooth device.

4. Calling

4.1 Basic call operation

Function	Headphone status	Operation
Insert incoming call	Answering call ringing	Press the multifunction key Q
Repeat incoming call	Answering call ringing	Press and hold the multifunction key Q for about 5 seconds
Cancel call	Calling	Press the multifunction key Q
Answer volume	Answering	Press the "A" key
Decrease volume	Answering	Press the "V" key
Mute	Answering	Press and hold the "A" key for about 3 seconds
Cancel mute	Answering mute	Press and hold the "A" key for about 3 seconds
Answering transfer to mobile	Answering headphone	Press and hold the multifunction key Q for about 3 seconds
Answering transfer to headphones	Answering mobile phone	Press and hold the multifunction key Q for about 3 seconds
Call on hold	Conversation on hold	Double press the multifunction key Q
Answer hold	Conversation on hold	Press and hold the multifunction key Q for 3 seconds

GN 安全注意事項:

為保證您的人身安全，請勿將該耳機佩戴或放置在心臟心臟附近的位置(小於10CM)。

請勿將插頭插入電源插座。

兒童應在成人監督下使用本設備，本產品并非玩具。

在高音量下使用耳機——特別是長時間使用——可能會對您的聽力造成損傷。

操作高保真音響開關或插入耳機時可能會發出尖利的聲音，其在高音量設置下可能會影響您的聽力。因此，在切換各種音源或插入耳機前，請將音量控制設置為最低。

為交通安全起見，駕駛時或騎自行車時請勿使用耳機。

10

DE Sicherheitshinweise!

Um Ihre persönliche Sicherheit zu garantieren, achten Sie bitte darauf, dass dieses Kopfhörer nicht in nächster Nähe (näher als 10cm) zu Ihrem Herzschrittmacher getragen oder aufbewahrt wird.

Klinkehtreiber nicht in stromführende Buchsen einführen.

Besaufsichtigen Sie Ihre Kinder bei der Benutzung des Geräts. Das Produkt ist kein Spielzeug.

Die Verwendung von Kopfhörern kann bei großer Lautstärke – vor allem im Dauerbetrieb – zur Schädigung des Gehörs führen.

Bei Umschaltvorgängen an Ihrer HiFi-Anlage oder bei Anschluss des Kopfhörers an die Anlage können Knackgeräusche auftreten, die bei hoher Lautstärke das Gehör beeinträchtigen. Drehen Sie daher den Lautstärkeregler immer auf Minimum, wenn Sie an Ihrer HiFi-Anlage zwischen verschiedenen Quellen (Radio, Plattenspieler, CD-Player ...) wählen oder den Kopfhörer anschließen.

Um Ihre Fahrtüchtigkeit und die Sicherheit anderer Verkehrsteilnehmer nicht zu gefährden, verwenden Sie Kopfhörer keinesfalls beim Lenken eines Kfz oder beim Radfahren.

16

DK Advarsell

For at garantere din personlige sikkerhed, skal du ikke bære eller holde hovedtelefonerne i nærheden (læstere end 10 cm) af en pacemaker.

Indsæt ikke stikket i stikkontakter.

Overvåg børn ved brug af udstyr, produktet er ikke legetøj.

Hovedtelefoner lytte ved høje lydstyrker Navnlige gleder over længere perioder - kan høre skader.

Driften af kontakter på din hi-fi-system eller tilslutte hovedtelefonerne kan forårsage klik der på volumen indstilling høj kan påvise hørearsen. Derfor altid indstiller lydstyrken til minimum, for der skiftes mellem forskellige kilder (tuner, platterspiller, CD-spiller, etc.) eller tilslutte hovedtelefonerne.

For trafikikkerheden, ikke anvendes under kørsel eller cykling.

22