

# EDIFIER<sup>®</sup>

---

## W855BT

Stereo Bluetooth<sup>®</sup> Headphone



---

Operating instructions

EDIFIER International Limited

[www.edifier.com](http://www.edifier.com)

© 2018 Edifier International Limited. All rights reserved.

Printed in China

**NOTICE:**

For the need of technical improvement and system upgrade, information contained herein may be subject to change from time to time without prior notice.

Products of EDIFIER will be customized for different applications. Pictures and illustrations shown on this manual may be slightly different from actual product. Picture for reference only, actual product prevails.

Ver1.1 IB-200-W0855B-01

# Product introduction

Before use this headphone, please carefully read this manual and keep it for your reference.

## Features

- 40mm large driver units create a clear and accurate Hi-Fi sound for all genres
  - Bluetooth V4.1 technology with AVRCP and A2DP profile support
  - Qualcomm® aptX™ codec offers impressive dynamic range for wireless playback
  - Built-in Lithium-ion battery offers up to 20 hours of playback
  - Buttons for volume adjustment, playback control, and answering calls
  - 3.5mm headphone port for alternative wired connection
  - Ergonomic design with soft leather ear cups for great comfort and noise isolation
  - Flexible alloy headband and clamshell case for perfect protection
- 

 
## Specifications

Headphone type	over-ear
Driver unit	40mm
Frequency response	20Hz-20KHz
Sound pressure level (SPL)	98dB
Rated impedance	32Ω
Bluetooth version	Bluetooth V4.1
Bluetooth protocol	HFP, HSP, A2DP, AVRCP
Effective distance	10m
Playback time	Up to 19 hrs
Answering time	Up to 20 hrs
Charging input	5.0V --- 500mA
Charging time	About 3 hours
Dimension	192.4x172.5x79.8mm
Weight	238g
Frequency Band	2.402GHz - 2.480GHz
RF Power output	≤20 dBm (EIRP)
Accessories	micro USB data charging cable: 1PCS audio cable: 1PCS storage bag: 1PCS

Note: Excessive pressure from headphones and headphones can cause hearing loss.

# Operational introduction

## Illustration

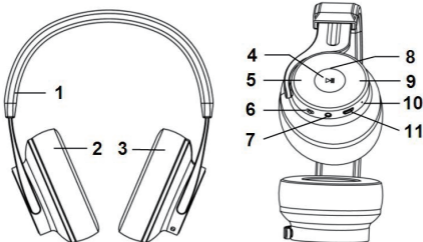

1	Adjustable headband	7	AUX-in input port
2	Left speaker	8	Status indicator
3	Right speaker	9	Volume increase
4	MFB buttons/NFC area	10	Microphone
5	Volume decrease	11	Charging port
6	Switch: ON/OFF/Pair		


## Charging

 The headphone build in a rechargeable battery, it needs fully charged at first time use. If only red indicator blinks and has warning tone per 5 minutes, it shows the headphone battery is in low level and you need to charge it.

1. Connect micro USB charging port on the headphone to USB power source socket with USB charging cable included.

Red indicator steady light: charging

Red indicator off: fully charged

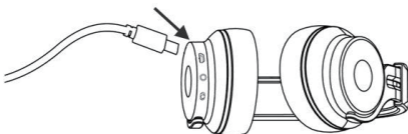

2. Charging time: it takes about 3 hours for battery fully charged.



Warning:

1. Rechargeable batteries of this product must be properly disposed for recycling.
2. Do not put the battery into a fire, to avoid an explosion.

## How to use the headphone

### ON/OFF

Function	Operation	Indicator
ON	Switch to ON location	Blue indicator light for 1 minute
OFF	Switch to OFF location	Red indicator light for 1 minute

Note: if the headphone disconnects any device after turning on, it will be in the standby mode all the time.

### Pair with Bluetooth device

#### How to enter pairing mode

function	operation	indicator
Enter pairing mode	Switch the switch to Bluetooth level for about 2 seconds	Red and blue indicator blink alternately

Note: the pairing mode will keep 2 minutes, if the headphone does not pair with any device over 2 minutes, it will automatically switch to standby mode.

### Pair with mobile phone

You need to pair the headphone to your mobile phone when you are in the first time use.

1. Keep mobile phone and headphone within 1 meter.
2. Make the headphone enters pairing mode (see "How to enter pairing mode").
3. Turn on the Bluetooth function on the phone, search Bluetooth devices and select "EDIFIER W855BT". When the connection is successful, it will be an indicator tone and the blue indicator blinks twice every 4 seconds.

Note:

 
1. PIN code for connection is "0000" if needed.
2. After completing connection, headphone and phone will remember each other. The headphone will automatically connect the latest connected device in the next time use.
3. If the headphone can't connect the device, press any buttons (MFB button, volume increase button or volume decrease button), the headphone will try to connect the latest connected device.
4. If the headphone disconnects the device due to out of the distance, it can automatically reconnect device within 5 minutes return. If it is over 5 minutes, you need to press any buttons (MFB button, volume increase button or volume decrease button) to connect the device.

## NFC connection

1. Turn on the headphone and switch on the NFC function on your device.
2. Put your device to near the headphone. The Bluetooth connection will be made automatically by NFC. Your device is now connected to the headphone.
3. Play the music on your device and adjust the volume to a desired level.

### Note:

1. When the phone is in standby mode or lock the screen, you can't use NFC to connect the headphone.
2. When in the first time pairing, you need to make the phone touch the headphone for longer time, take away the phone until the headphone into pairing mode.
3. When device disconnects the headphone, you can use the NFC function to connect the device. When have connected device, you can also use NFC function to disconnect the device.

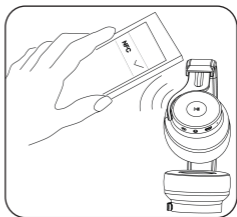

## Pairing and connecting with multiple devices

The headphone can connect with two Bluetooth devices at the same time.

The operation is as below.

1. Firstly make the headphone pair with the first device.
2. Re-start the headphone. Enter the pairing mode and pair with the second device.
3. Select connecting with the headphone from the first device. The headphone has already connected with the first and second device; or automatically connect the two devices after the headphone re-start.

### Note:

- Disable pairing one headphone with two devices: When the headphone connects with no device, press MFB button and volume decrease button for about 2 seconds, you will hear an indicator tone.
- Enable pairing one headphone with two devices: When the headphone stands by and connects with no device, press MFB button and volume increase button for about 2 seconds at the same time, you will hear an indicator tone.
- If you only need to connect with one phone, we suggest you to disable pairing one headphone with two devices in order to improve the headphone's performance.

# How to use headphone to answer calls

## Basic answering operation

Functions	Headphone status	Operation
Cancel a call	Calling	Press ►   button once
Answer a call	Incoming a call	Press ►   button once
Reject a call	Incoming a call	Press and hold ►   button about 2 seconds
End a call	Answering	Press ►   button once
Increase volume	Answering	Press volume increase button once
Decrease volume	Answering	Press volume decrease button once
Transfer call to mobile	Answering	Press and hold ►   button about 2 seconds
Transfer call to headphone	Answering	Press and hold ►   button about 2 seconds
Microphone muted	Answering	Press and hold volume increase button about 2 seconds
Mute off	Answering (Microphone muted)	Press and hold volume increase button about 2 seconds
Voice dial	Device connected	Press ►   and volume increase button at the same time
Last number redial	Device connected	Double click ►   button

### Note:

- When the headphone volume is set to its maximum, you will hear an indicator tone.
- When the headphone is in mute status, you will hear the “beep” prompts every 10 seconds.
- For some mobiles, the call will be transferred prior to the mobile when the answer call button on the mobile is pressed. Now you can use the headphone’s call switch or operate on your mobile to switch the call to the headphone. Please refer to your mobile manual for the details.
- When you use voice dial, please ensure that your mobile phone supports this function and turn it on.

## Three party call operation

Function	Headphone status	Operation
Answer new incoming call and end the current call	Incoming the second call	Press ►   button once
Answer new incoming call and end the current call	Incoming the second call	Press ►   button once
Switch call	Answering (hold)	Double click ►   button
End the current call and switch to the hold call	Answering (hold)	Double click ►   button

## Connect call from two mobiles

Function	Headphone status	Operation
End the first mobile call and answer the second incoming call	The first call is answering and there is another incoming call	Press ►   button once
Hold the first mobile call and answer the second incoming call	The first call is answering and there is another incoming call	Double click ►   button
Switch call	Answering while one call is held	Double click ►   button
End the current call and back to the hold mobile call	Answering while one call is held	Press ►   button once

## Play music

### Bluetooth audio mode

When the headphone has connected to the mobile phone that supports A2DP protocol, you can enjoy wireless music by the headphone.

Function	Headphone status	Operation
Increase volume	Play music	Press volume increase button
Decrease volume	Play music	Press volume decrease button
Previous track	Play music	Press and hold volume decrease button
Next track	Play music	Press and hold volume increase button
Pause	Play music	Press ►   button once
Resume	Pause music	Press ►   button once

 
#### Note:

- When the headphone volume is maximized, you will hear an indicator tone.
- The remote play controls function (Previous/Next/Pause/Resume) require your mobile supports AVRCP protocol.

## AUX in audio mode


This headphone supports AUX in audio input, as the figure shows, you can connect the headphone to player with 3.5mm audio cable for enjoying music.



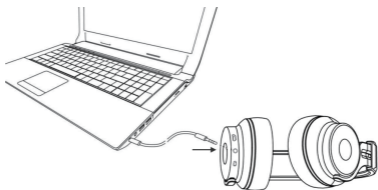

**Note:**

 1. When you insert the 3.5mm audio cable, the headphone will turn off and Bluetooth connection will automatically disconnect, only effective with AUX in audio input.
2. If you want to use Bluetooth function, please plug out the 3.5mm audio cable, re-start and pair again.

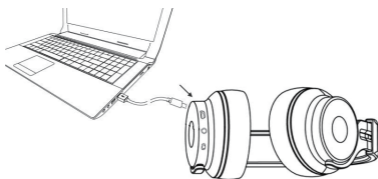

## USB audio mode

This headphone can connect to PC by USB data cable to listen to the music on the PC.

**Note:**

1. Only the USB data cable with data transmission can connect to PC for playing.
2. When connect to PC in the first time, the music maybe not directly output from PC, you need to set the audio output to the headphone on PC.

## Meaning of indicator lights

Indicator lights	Headphone status
The red and blue light blinks alternatively	Pairing
The blue light blinks once every 2 seconds.	Device disconnected
The blue light blinks twice every 4 seconds.	Device connected
The red light blinks	Low power level

## Restore factory settings

Turn off the headphone, press and hold volume increase button about 3 seconds while charging and release the button when the red and blue light blinks at the same time. Meanwhile you will hear an indicator tone.

Note:

After the factory settings are restored, the paired list of the headphone will be deleted. The headphone will automatically enter the pairing mode after turning on.

The headphone will not automatically connect any device. If the headphone needs to connect any device, the new pairing is required.

## Maintenance and repair

During usage, please read the following suggestions which would help you follow the warranty terms and make the product life longer.

- Keep the product dry and far from any damp places in order to avoid the affect on the product's internal circuit. You should avoid using the product during intense exercise or when you sweat too much.
- Do not place the product directly under the sun or where the temperature is high. High temperature will shorten the electronic components' life and damagebatteries.
- Do not put the product at very cold places in order to prevent its internal circuit board from being damaged.
- Do not dismantle the product. Non-technician may damage the product.
- Do not drop, violently vibrate or strike the product with hard items in order to prevent its internal circuit from being damaged.
- Do not use strong chemical products or detergent to clean the headphone.
- Do not use any sharp items to scratch the product surface in order to prevent its casing from being damaged. and its outlook from being affected.

If the product cannot work properly, please send it to your qualified service organizations. The staff shall help you with their whole heart.

## FAQs

### **The red light is flashing instead of the blue light.**

- It means the headphone battery has low power. You need to recharge the headphone.

### **The red light is off when charging.**

- Please ensure the connection between the charging device and the headphone works well.
- The batteries would be in the state of hibernate if the headphone is not in use for a long time. It needs to be recharged about 30 minutes. By then the red light will be on.

### **You cannot hear anything from the headphone.**

- make sure the headphone is ON
- Make sure the headphone's volume is correct.
- Make sure the headphone is properly connected with your mobile.
- Make sure if the headphone is too far away from your mobile or there is any interfere device nearby.

### **The call quality is not good.**

- Make sure if your mobile is in the area having strong signal.
- The effective work range of the headphone is 10 meters. Make sure the headphone is within the effective work range and there are no obstacles between the headphone and your mobile.

### **Why cannot the headphone pause, restore, go last and next when playing music.**

- These functions need the devices being paired with the headphone to support AVRCP protocol (Audio/Video Remote Control Profile).

### **It can't connect by NFC function**

- make sure NFC function on the phone is on.
- you need to take the phone touch headphone for about 3 seconds in the first pairing, you can take away the phone until the red and blue indicator lights blink alternately, or the pairing maybe unsuccessful.

## CAUTION

Danger of explosion if battery is incorrectly replaced.

Replace only with the same or equivalent type.

A warning that batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like.

---



1. "To prevent possible hearing damage, do not listen at high volume levels for long periods."
  2. "Fully understand user manual before use."
  3. "Ensure your player at low volume levels or power off before you leaving."
- 



Correct Disposal of this product. This marking indicates that this product should not be disposed with other household disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.



Danger of explosion if the battery is incorrectly replaced. Replace only with the same or equivalent type.

For products with removable battery, the battery must be properly recycled or disposed. For products with built-in battery, disassembling is prohibited.

Never disassemble, hit with force, squeeze batteries or dispose of batteries in fire. Do not expose batteries in conductive materials, liquid, fire or heat. Do not let metal object contact two battery poles. If the battery looks swollen, leaking, discolored, having odor or any abnormal appearance, stop using it. Do not use the battery after immersed in water.

Improper use of battery may lead to explosion or leakage, causing skin burn or other injuries; in the event of battery leakage, handle it with care and immediately dispose of the battery in the manner in compliance with applicable laws and regulations in your locality.



## **EN** Warning!

---

To guarantee your personal safety, please do not wear or keep earphones in the vicinity (closer than 10cm) of a pacemaker.

Do not insert plug into electric sockets.

Supervise children when using the equipment, the product is not a toy.

Earphone listening at high volume levels – particularly, over extended periods of time – may damage your hearing.

The operation of switches on your hi-fi system or plugging in the earphones may cause clicks which at high volume setting may affect your hearing. Therefore, always set the volume control to minimum before switching between different sources (tuner, turntable, CD player, etc.) or plugging in the earphones.

For traffic safety, do not use earphones while driving or cycling.

---

## **CN** 安全注意事項!

---

為保證您的人身安全，請勿將該耳機佩戴或放置在離心臟起搏器過近的位置 (小於10CM)。

請勿將插頭插入電源插座。

兒童應在成人監督下使用本設備，本產品並非玩具。

在高音量下使用耳機——特別是長時間使用——可能會對您的聽力造成損傷。

操作高保真音響開關或插入耳機時可能會發出尖利的聲音，其在高音量設置下可能會影響您的聽力。因此，在切換各種音源或插入耳機前，請將音量控制設置為最低。

為交通安全起見，駕駛時或騎自行車時請勿使用耳機。

---

## FR Conseils de Sécurité!

---

Pour votre sécurité, ne portez pas et ne posez pas ce casque à proximité immédiate (moins de 10 cm) d'un pacemaker.

Ne pas introduire la fiche à jack dans des prises de courant.

Surveillez vos enfants s'ils utilisent l'appareil. Ce produit n'est pas un jouet.

Un casque d'écoute utilisé à un volume élevé risque de provoquer de troubles de l'audition, en particulier s'il est porté de façon prolongée.

Lorsque vous procédez à un réglage sur votre installation hi-fi ou que vous branchez le casque sur l'installation, des bruits dangereux pour l'oreille peuvent se produire si le son est réglé sur un volume élevé. Pour cette raison, il faut toujours mettre le son au minimum avant de passer d'une source à l'autre (radio, platine, lecteur de CD ...) ou de brancher le casque.

Pour ne pas mettre en danger votre sécurité au volant ni celle des autres usagers de la route, n'utilisez jamais le casque lorsque vous conduisez ou que vous roulez à vélo.

---



## **IT** **Attenzione!**

---

Al fine di garantire la sicurezza personale, fare attenzione che queste cuffie non siano posizionate in prossimità del proprio eventuale pace maker (con una distanza inferiore a 10 cm).

Non introdurre la spina jack in una presa sotto tensione.

Sorvegliare i bambini quando utilizzano il dispositivo. Questo apparecchio non è un giocattolo.

L'utilizzo delle cuffie ad alto volume, soprattutto se prolungato, può danneggiare l'udito.

Maneggiare le manopole del Vostro sistema hi-fi o inserire le cuffie quando il volume è troppo alto, potrebbe produrre dei rumori che potrebbero danneggiare l'udito, soprattutto se il volume è alto. Si consiglia pertanto di regolare il volume al minimo prima di passare da una fonte all'altra (radio, giradischi, lettore CD, ecc.) o prima di collegare le cuffie.

Per la sicurezza nel traffico, si prega di non usare mai le cuffie mentre si guida o si va in bicicletta.

---

## **ID** Peringatan!

---

Untuk menjamin keselamatan diri Anda, jangan memakai atau menyimpan earphone di sekitar (dekat dari 10 cm) alat pacu jantung.

Jangan masukkan steker ke stopkontak listrik.

Awasi anak-anak saat menggunakan peralatan, produk ini bukan mainan.

Mendengarkan earphone pada tingkat volume tinggi – khususnya, selama waktu yang lama – dapat merusak pendengaran Anda.

Penggunaan sakelar pada sistem hi-fi Anda, atau penyumbatan pada earphone dapat menimbulkan klik yang pada pengaturan volume tinggi dapat memengaruhi pendengaran Anda.

Karena itu, selalu mengatur kontrol volume paling rendah sebelum beralih di antara berbagai sumber (penala, pemutar piringan hitam, pemutar CD, dll) atau penyumbatan pada earphone.

Untuk keselamatan lalu lintas, jangan gunakan earphone selama mengemudi atau berkendara.

---

## **NL** Waarschuwing!

---

Om uw persoonlijke veiligheid te garanderen, dient de koptelefoon niet te worden bewaard of gedragen in de buurt van (minder dan 10 cm) een pacemaker. Steek de stekker in een stopcontact.

Houd toezicht op kinderen tijdens het gebruik van het apparaat; dit product is geen speelgoed.

Luisteren met de koptelefoon op hoog volume – met name gedurende een langere periode – kan leiden tot schade aan uw gehoor.

De bediening van de schakelaars op uw hifisysteem of het insteken van uw koptelefoon kan leiden tot harde klikgeluiden wat uw gehoor kan aantasten.

Om deze reden dient de volumeknop altijd op een minimum te worden geschakeld, voordat er tussen de verschillende bronnen (tuner, draaitafel, cd-speler, enz.) wordt geschakeld of de koptelefoon wordt aangesloten.

Met het oog op verkeersveiligheid dient de koptelefoon niet te worden gebruikt tijdens het rijden of fietsen.

---

## **KR** 경고!

---

안전상의 이유로, 이 헤드폰은 심장박동 조절장치 근처 (10cm 이내)에 두어서는 안됩니다.

잭 플러그를 전류가 흐르는 소켓에 삽입하지 마십시오.

어린이가 헤드폰을 사용할 때는 보호자의 주의 깊은 관찰이 필요합니다. 이 제품은 장난감이 아닙니다.

헤드폰을 높은 볼륨상태에서 특히 장기간 사용할 경우 청각에 해가 될수 있습니다.

하이파이 오디오 시스템상에서 스위치를 바꾸거나 헤드폰을 하이파이 오디오 시스템에 연결할 경우, 높은 볼륨상태에서는 청각에 해를 줄수 있는 클릭소리가 날수 있습니다. 그러므로 하이파이 오디오 시스템상의 한 소스기기에서 다른 소스기기(라디오, 레코드 플레이어, CD-플레이어...)를 선택하거나 헤드폰을 연결시킬 경우에는 항상 볼륨을 최저상태로 조정해 놓으십시오.

여러분의 운전상태와 다른 운전자들의 안전을 보호하기 위해 운전 중이거나 자전거를 타고 이동할 시에는 헤드폰 착용을 삼가 해 주십시오.

---

## **DE** Sicherheitshinweis!

---

Um Ihre persönliche Sicherheit zu garantieren, achten Sie bitte darauf, dass dieser Kopfhörer nicht in nächster Nähe (näher als 10cm) zu Ihrem

Herzschrittmacher getragen oder aufbewahrt wird.

Klinkenstecker nicht in stromführende Buchsen einführen.

Beaufsichtigen Sie ihre Kinder bei der Benutzung des Geräts. Das Produkt ist kein Spielzeug.

Die Verwendung von Kopfhörern kann bei großer Lautstärke – vor allem im Dauerbetrieb – zur Schädigung des Gehörs führen.

Bei Umschaltvorgängen an Ihrer HiFi-Anlage oder bei Anschluss des Kopfhörers an die Anlage können Knackgeräusche auftreten, die bei hoher Lautstärke das Gehör beeinträchtigen. Drehen Sie daher den Lautstärkeregler immer auf Minimum, wenn Sie an Ihrer HiFi-Anlage zwischen verschiedenen Quellen (Radio, Plattenspieler, CD-Player ...) wählen oder den Kopfhörer anschließen.

Um Ihre Fahrtüchtigkeit und die Sicherheit anderer Verkehrsteilnehmer nicht zu gefährden, verwenden Sie Kopfhörer keinesfalls beim Lenken eines Kfz oder beim Radfahren.

---

## **ES** ¡Atención!

---

Por su propia seguridad, procure no llevar ni guardar estos auriculares muy cerca de su marcapasos (a menos de 10cm).

No introducir el conector Jack en los casquillos conductores de corriente.

Vigile a sus hijos al utilizar el equipo. Este producto no es un juguete.

La utilización de auriculares a un volumen muy alto – sobre todo al utilizarlos durante largos períodos – puede conducir al deterioro del oído.

Al operar los interruptores de su sistema HiFi o al conectar los auriculares al sistema puede hacer clic, lo que a un volumen muy alto puede deteriorar el oído. Por lo tanto disminuya el nivel de volumen al mínimo al seleccionar entre diferentes fuentes (radio, tocadiscos, reproductor de CD ...) en su sistema HiFi o al conectar los auriculares.

Para no poner en peligro ni su capacidad de conducir, ni la seguridad de otros usuarios de la vía pública, no utilice en ningún caso sus auriculares al conducir un vehículo o al andar en bicicleta.

---

## **RU** Предупреждение!

---

В целях гарантии вашей безопасности просим не надевать и не держать наушники вблизи (ближе 10 см) кардиостимулятора.

Запрещается вставлять штекер в электрические розетки.

При использовании прибора присматривайте за детьми, так как это оборудование не является игрушкой.

Прослушивание музыки через наушники на высокой громкости, особенно длительное время, может навредить вашему слуховому аппарату.

Включение и выключение переключателей на высококачественной системе воспроизведения или подключение наушников может привести к возникновению щелчков, которые на высокой громкости могут нанести вред вашему слуховому аппарату. Таким образом, всегда устанавливайте громкость на минимальный уровень, прежде чем производить переключение между различными источниками (тюнер, диск проигрывателя, CD-проигрыватель и т.д.) или подключать наушники в систему.

Для безопасности дорожного движения не используйте наушники во время езды на велосипеде и вождения автомобиля.

---

لضمان سلامتك الشخصية، يرجى عدم ارتداء سماعات الرأس أو الاحتفاظ بها بالقرب من (أقرب من 10 سم) جهاز تنظيم ضربات القلب.

لا تُدخل القابس في مأخذ أهربائية.

احرص على الإشراف على الأطفال عند استخدام الجهاز، فالمنتج ليس لعبة.

الاستماع من خلال سماعات الأذن عند مستويات الصوت العالية، خاصة على مدى فترات طويلة، قد يضر بسمعك.

تشغيل المفاتيح في نظام واي فاي الخاص بك أو إدخال سماعات الرأس قد يسبب نقرات والتي قد تؤثر على سمعك في مستويات الصوت العالية.

لذلك، قم دائماً بضبط زر التحكم في مستوى الصوت على الحد الأدنى قبل التبديل بين المصادر المختلفة (مؤلف، قرص دوار، مشغل أقراص مدمجة، الخ) أو عند توصيل سماعات الرأس.

من أجل السلامة المرورية، لا تستخدم سماعات الرأس أثناء القيادة أو راوب الدراجات.



## JP 安全指摘事項!

---

安全のために、このヘッドフォン-スメ-カ-の近く(10cm以内)で使用または保管することは避けてください。

差し込プラグをコンセントに差し込まないようにしてください。

お子様が使用になる場合は、必ず大人が付き添えってください。本製品は玩具ではありません。

大きな音量のヘッドフォンの使用は、特に長時間使用する場合において聴覚障害の原因となる恐れがあります。

HiFi機器の切り替え時、あるいは機器にヘッドフォンを接続する際に、音量が大きい場合にはガリガリという騒音が発生し、聴覚に悪影響を与える恐れがあります。HiFi機器で各ソース（ラジオ、レコードプレーヤ、CDプレーヤ...）を選ぶ際、あるいはヘッドフォンを接続する際には、音量のつまみを常に最少にしてください。

安全なドライブ、そして他の運転手の安全のためにも、お車を運転する場合、あるいは自転車に乗る場合にはヘッドフォンは絶対に使用しないでください。

---

## **PL** Ostrzeżenie!

---

Aby zapewnić sobie bezpieczeństwo, nie należy nosić ani trzymać słuchawek w pobliżu (w odległości mniejszej niż 10cm) od rozrusznika serca.

Nie wkładać wtyczki do gniazdka elektrycznego.

Nadzorować dzieci podczas korzystania ze sprzętu, produkt to nie zabawka.

Słuchanie w słuchawkach przy wysokich poziomach głośności, szczególnie przez długie okresy czasu, może spowodować uszkodzenie słuchu.

Działanie przełączników w systemie hi-fi lub podłączanie słuchawek mogą powodować mocne impulsy dźwiękowe, które przy dużej głośności mogą powodować pogorszenie słuchu.

Dlatego należy zawsze ustawiać głośność na minimalnym poziomie przed przełączaniem między różnymi źródłami dźwięku (tunerem, gramofonem, odtwarzaczem CD itp.) lub podłączeniem słuchawek.

Dla zachowania bezpieczeństwa jazdy nie należy używać słuchawek podczas prowadzenia samochodu czy jazdy na rowerze.

---

## **DK** Advarsel!

---

For at garantere din personlige sikkerhed, skal du ikke bære eller holde hovedtelefonerne i nærheden (tættere end 10 cm) af en pacemaker.

Indsæt ikke stikket i stikkontakter.

Overvåge børn ved brug af udstyr, produktet er ikke legetøj.

Hovedtelefon lytte ved høje lydstyrker Navnlig glæder over længere perioder - kan høreskader.

Driften af kontakter på din hi-fi-system eller tilslutte hovedtelefonerne kan forårsage klik der på volumen indstilling højt kan påvirke hørelsen. Derfor altid indstiller lydstyrken til minimum, før der skiftes mellem forskellige kilder (tuner, pladespiller, CD-afspiller, etc.) eller tilslutte hovedtelefonerne.

For trafiksikkerheden, ikke anvendes under kørsel eller cykling.

---