


EDIFIER

W675BT

Bluetooth Stereo Headphones



北京爱德发科技有限公司 出品
地址：北京市海淀区北四环西路68号
生产厂：东莞市漫步者科技有限公司
厂址：东莞松山湖高新技术产业开发区工业东路2号

商标说明：EDIFIER®、漫步者®均为北京爱德发科技有限公司持有注册商标，仿冒必究。

User Manual
Operating instructions

型号: Ver1.0 串: 100.W675B-00

■ Overview

Before use the headphone, please carefully read this user manual and keep it for further reference.

- Folding portable design for easy carrying
- 40mm large drivers ensure premium sound quality
- Bluetooth V4.1 with A2DP support offers the latest Bluetooth experience
- Supports NFC pairing, CVC voice noise reduction and connect two Bluetooth devices at the same time
- Up to 20 hours of playback and 300 hours of standby battery life
- Integrated multi-function keys, support voice calls, music and volume controls


Specification

Bluetooth version: Bluetooth V4.1
Bluetooth protocols: HFP, HSP, A2DP, AVRCP
Bluetooth distance: 10m
Playback time: 20hrs
Standby time: About 300hrs
Recharging time: 2.5h
Recharging input: 5.0V / 500mA
Frequency response: 20Hz-20KHz
Sensitivity(SPL): 95dB
Rated impedance: 32 Ω

Note: Design and specifications are subject to change without notice


■ Instructions

1. Illustration

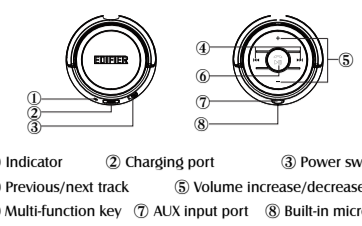

① Indicator ② Charging port ③ Power switch
④ Previous/next track ⑤ Volume increase/decrease
⑥ Multi-function key ⑦ AUX input port ⑧ Built-in microphone


Box content

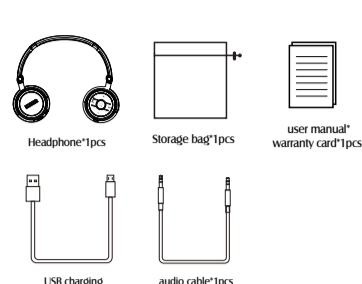

2. Charging

Before the first time use, or the battery level is low, you need to fully charge the headphone firstly with the USB charging cable.

Red light on = Charging
Red light off = Fully charge
Recharging time: approx 3 hours.



Tip: 1. When the red light is instead of blue light flash, and issue a prompt tone per minutes, it shows the battery is in low level, and the headphone only can use about 30 minutes. 2. To avoid shortening the battery life, please charge the headphone every 1 month at least when you place the headphone for a long time.

Warning: The rechargeable batteries providing power for the product must be properly disposed for recycling. Do not place the batteries into fire to prevent explosion.

■ How to use the headphone

1. On/Off

Function	Operation	Indicator
ON	Toggle the power switch to ON location	Blue light quickly flashes thrice
OFF	Toggle the power switch to OFF location	None

Note: If the headphone doesn't connect to any device after power on for 5 minutes, it will automatically turn off to safe battery.

2. Pair/connection

Pair with Bluetooth phones

Steps are as follow

- Make the headphone keep close to mobile phone, the nearer, the better. Press and hold the multi-function key for about 5 seconds, and loose the key until red/blue lights flash alternatively and issue prompt tone, now the headphone enter into pairing mode.

2. Enable Bluetooth function on your mobile phone and search for Bluetooth devices. Select "EDIFIER W675BT" to pair and connect.

When successfully connected, the blue light of the headphone flashes twice every 4 seconds and the headphone issue a prompt tone.

Note:

- The pairing mode will keep 2 minutes, if the headphone have not connect with any device over 2 minutes, it will automatically switch to standby mode.
- After first paired, when you power on the headphone again, it will automatically connect the last connected device.
- If the headphone disconnect with the device as the device over effective distance, it can automatically re-connect to the device after come back the effective distance in 5 minutes, when over 5 minutes, press any key to re-connect the device.


NFC connection

Firstly, please ensure your mobile phone support NFC connection and this function is enabled.

(Let NFC area of your mobile phone touch the NFC area of the headphone, then W675BT will automatically pair and connect with the mobile phone.)

Note: When the phone is in sleep mode or lock screen status, it can't use NFC to pair with the headphone.

In the first pair, let the phone touch headphone for longer time and take away the phone until W675BT enter into pairing mode

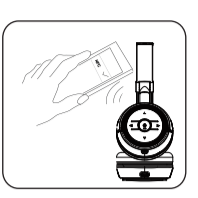

Connecting with two devices

- Pair the headphone with the first device.
- Press and hold the multi-function key until red/blue light flash alternatively and enter into pairing mode, and pair with the second device.
- Select connecting with the headphone from the first device. Now the headphone is connected with the first and second devices.

4. Making call via headphone

1. Basic operations

Function	Headphone status	Operation
Cancel a call	Calling	Press multi-function key
Answer call	Incoming a call	Press multi-function key
Reject call	Incoming a call	Press and hold multi-function key for about 2 seconds
End call	Talking	Press multi-function key
Increase volume	Talking	Press + key
Decrease volume	Talking	Press - key
Transfer call from one headphone to another	Talking	Double click the next track key
Transfer call to another phone	Talking	Double click the next track key
Microphone mute	Talking	Press and hold the previous track key for about 2 seconds
Cancel mute	Talking (microphone muted)	Press and hold the previous track key for about 2 seconds
Last number redial	Standby and have connected with device	Press multi-function key twice
Voice assistant	Standby and have connected with device	Press volume increase/decrease key at the same time

2. Three party call operation

Function	Headphone status	Operation
Answer new incoming call and end the current call	Incoming the second call when talking	Press multi-function key
Answer new incoming call and put the current call on hold	Incoming the second call when talking	Press multi-function key twice
Switch call	Talking, one call is put on hold	Double click multi-function key
Answer new incoming call and put the current call on hold	Talking, one call is put on hold	Press multi-function key

Note: For some mobile phones, when you press the answer key on the phone for answering the call, the call will preferentially be transferred to the phone, such as iPhone. At this time, you can use the conversation switch function of headphone or operate on the mobile phone, to switch the conversation to the headphone.

3. Connect call from two mobiles

Function	Headphone status	Operation
Put the first mobile call on hold and answer the second incoming call	Another call comes in when you are on the first call	Press multi-function key twice
Put the first mobile call and answer the second incoming call	Another call comes in when you are on the first call	Press multi-function key
Switch call	Talking while one call is on hold	Double click multi-function key
Put the current call and return to the on hold mobile call	Talking while one call is on hold	Press multi-function key

5. Play music

1 Bluetooth mode

Function	Headphone status	Operation
Increase volume	Play music	Press volume increase key
Decrease volume	Play music	Press volume decrease key
Previous track	Play music	Press the previous track key
Next track	Play music	Press the next track key
Pause	Play music	Press multi-function key
Resume play	Pause to play music	Press multi-function key

Note: Remote play control (previous track/next track/pause/resume) play function, need your mobile phone or Bluetooth emitter supporting AVRCP protocol. Please carefully read the user manual of your mobile phone or Bluetooth emitter.

2. AUX in audio mode

W675BT supports AUX in audio input, using 3.5mm audio cable included to switch the headphone to wired headphone.

Note:

- Under any status, connect in AUX audio cable, the Bluetooth function will be enabled and the light is off. Please toggle the power switch to OFF location at this time.
- If you want to use Bluetooth function, please pull out the 3.5mm audio cable, and re-power on the headphone and repair with the device.
- Under AUX in input status, the headphone is in off status, any key is no function.

6. Indicator

Indicator	Status
Red/blue light flash alternatively	Pairing status
Blue light flashes once every 2 seconds	Disconnect with device
Blue light flashes twice every 5 seconds	Connected with device
Red light flashes instead of blue light	Low battery level

7. Restore factory setting

Under any status, press and hold the multi-function key for about 6 seconds, after blue light flashes thrice slowly, the headphone finish restore factory setting.

Note: After the headphone restore factory setting, the pairing list of headphone will be clear, when power on the headphone again, it will automatically enter into pairing mode, if you need to connect with device, please repair again.

■ Maintenance and repair

Please read the following suggestions. These suggestions will help you stay in compliance with the warranty terms and prolonging the product life.

- Keep the product dry and away from wet places to avoid moisture getting into the internal circuit. Do not use the product during intense exercise or when you sweat too much.
- Do not place the product under directly the sunlight or near heat sources. High temperature will shorten the electronic components' life and damage batteries and cause certain plastic parts deformation.
- Do not put the product in very cold places in order to prevent its internal circuit board from being damaged.
- Do not dismantle the product. Non-technician may damage the product.
- Do not drop, violently vibrate or strike the product with hard items. It may cause damage to the circuit.
- Do not use strong chemical products or detergent to clean the headphone.
- Do not use any sharp items to scratch the product surface. It may damage the housing surface.

If the product cannot work properly, please send it to your local

■ FAQs

1 The red light is flashing instead of the blue light.

Answer: It means the headphone battery has low power. You need to recharge the headphone.

2 The red light is off when charging.

Answer: a. Please ensure the connection between the charging device and the headphone works well.
b. The batteries would be in the state of hibernate if the headphone is not in use for a long time. It needs to be recharged for about 30 minutes before the red light comes back on.

3 You cannot hear anything from the headphone.

Answer: a. Make sure the headphone's volume is correct.
b. Make sure the headphone is properly connected with your mobile.
c. Make sure if the headphone is not out of the range from your mobile or there is any interfering device nearby.

4 The call quality is not good.

Answer: a. Make sure if your mobile is in the area having strong signal.
b. The effective work range of the headphone is 10 meters. Make sure the headphone is within the effective work range and there are no obstacles between the headphone and your mobile.


5 Why cannot the headphone pause, resume, go last and next when playing music?

Answer: These functions require paired devices that support AVRCP protocol (Audio/Video Remote Control Profile).

CAUTION


Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.

A warning that batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine fire or the like.



- To prevent possible hearing damage, do not listen at high volume levels for long periods.*
- *Fully understand user manual before use.*
- *Ensure your player at low volume levels or power off before you leaving.*

Correct Disposal of this product: This marking indicates that this product should not be disposed with other household disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.



⚠ Warning!

To guarantee your personal safety, please do not wear or keep earphones in the vicinity (closer than 10cm) of a pacemaker.

Do not insert plug into electric sockets.

Supervise children when using the equipment, the product is not a toy.

Earphone listening at high volume levels – particularly, over extended periods of time – may damage your hearing.

The operation of switches on your hifi system or plugging in the earphones may cause clicks which at high volume setting may affect your hearing. Therefore, always set the volume control to minimum before switching between different sources (tuner, turntable, CD player, etc.) or plugging in the earphones.

For traffic safety, do not use earphones while driving or cycling.

⚠ 安全注意事項:

為保證您的人身安全，請勿將該耳機佩戴或放在離心臟距離過近的位置(小於10CM)。

請勿將插頭插入電源插座。

兒童應在成人監督下使用本設備。本產品并非玩具。

在高音響下使用耳機——特別長時間使用——可能會對您的聽力造成損傷。

操作高保真音響開關或插入耳機時可能會發出尖利的聲音，其在高音響設置下可能會影響您的聽力。因此，在切換各種音源或插入耳機前，請將音響控制設置為最低。

為交通安全起見，駕駛時或騎自行車時請勿使用耳機。

⚠ Consells de Sécurité!

Pour votre sécurité, ne portez pas et ne posez pas ce casque à proximité immédiate (moins de 10 cm) d'un pacemaker.

Ne pas introduire la fiche à Jack dans des prises de courant.

Surveillez vos enfants s'ils utilisent l'appareil. Ce produit n'est pas un jouet.

Un casque d'écoute utilisé à un volume élevé risque de provoquer de troubles de l'audition, en particulier s'il est porté de façon prolongée.

Lorsque vous procédez à un réglage sur votre installation hi-fi ou que vous branchez le casque sur l'installation, des bruits dangereux pour l'oreille peuvent se produire si le son est réglé sur un volume élevé. Pour cette raison, il faut toujours mettre le son au minimum avant de passer d'une source à l'autre (radio, lecteur, CD...) ou de brancher le casque.

Pour ne pas mettre en danger votre sécurité au volant ni celle des autres usagers de la route, n'utilisez jamais le casque lorsque vous conduisez ou que vous roulez à vélo.

⚠ Attenzione!

Al fine di garantire la sicurezza personale, fare attenzione che questo cuffie non siano posizionate in prossimità del proprio eventuale pace maker (con una distanza inferiore a 10 cm).

Non introdurre la spina jack in una presa sotto tensione.

Sovvegliare i bambini quando utilizzano il dispositivo. Questo apparecchio non è un giocattolo.

L'utilizzo delle cuffie ad alto volume, soprattutto se prolungato, può danneggiare l'udito.

Maneggiare le manopole del Vostro sistema hi-fi o inserire il cuffie quando il volume è troppo alto, potrebbe produrre dei rumori che potrebbero danneggiare l'udito, soprattutto se il volume è alto. Si consiglia pertanto di regolare il volume al minimo prima di passare da una fonte all'altra (radio, giradischi, lettore CD, ecc.) o prima di collegare le cuffie.

Per la sicurezza nel traffico, si prega di non usare mai le cuffie mentre si guida o si va in bicicletta.

⚠ Peringatan!

Untuk menjamin keselamatan diri Anda, jangan memakai alat menyimpulkan earphone di sekitar (dekat dari 10 cm) alat pacu jantung.

Jangan masukkan steker ke stopkontak listrik.

Awasi anak-anak saat menggunakan peralatan, produk ini bukan mainan.

Mendengarkan earphone pada tingkat volume tinggi – khususnya, selama waktu yang lama – dapat merusak pendengaran Anda.

Penggunaan speaker pada sistem hi-fi Anda, atau penyumbatan pada earphone dapat menimbulkan klik yang pada pengaturan volume tinggi dapat memengaruhi pendengaran Anda.

Karena itu, selalu mengatur kontrol volume paling rendah sebelum beralih di antara berbagai sumber (penala, pemutar piringan hitam, pemutar CD, dll) atau penyumbatan pada earphone.

Untuk keselamatan lalu lintas, jangan gunakan earphone selama mengemudi atau berkendara.

⚠ Waarschuwing!

Om uw persoonlijke veiligheid te garanderen, dient de koptelefoon niet te worden bewaard of gedragen in de buurt van (minder dan 10 cm) een pacemaker. Steek de stekker in een stopcontact.

Houd toezicht op kinderen tijdens het gebruik van het apparaat; dit product is geen speelgoed.

Luiselsten met de koptelefoon op hoog volume – met name gedurende een langere periode – kan leiden tot schade aan uw gehoor.

De bediening van de schakelaars op uw hifysysteem of het insteken van uw koptelefoon kan leiden tot harde klikgeluiden wat uw gehoor kan aantasten.

Om deze reden dient de volumeknop altijd op een minimum te worden geschakeld, voordat er tussen de verschillende bronnen (tuner, draaitafel, cd-speler, enz.) wordt geschakeld of de koptelefoon wordt aangesloten.

Met het oog op verkeersveiligheid dient de koptelefoon niet te worden gebruikt tijdens het rijden of fietsen.

⚠ 경고!

안전성을 이유로 이 헤드폰은 심장박동 조절장치 근처 (10cm 이내)에 두어서는 안됩니다.

잭 플러그를 전류가 흐르는 소켓에 삽입하지 마십시오.

어린이가 이 헤드폰을 사용할 때는 보호자의 주의 깊은 관찰이 필요합니다. 이 제품은 장난감이 아닙니다.

헤드폰을 높은 볼륨 상태에서 장시간 사용하기를 권장하지 않습니다.

하이파이 오디오 시스템 상에서 스위치를 바꾸거나 헤드폰을 하이파이 오디오 시스템에 연결할 경우, 높은 볼륨 상태에서 청각에 해를 줄 수 있는 클릭 소리가 날 수 있습니다. 그러므로 하이파이 오디오 시스템 상의 한 소스기에 서 다른 소스기(라디오, 레코드 플레이어, CD 플레이어...)를 선택하거나 헤드폰을 연결시킬 경우에는 항상 볼륨을 조차성분로 조정해 놓으십시오.

여러분의 운향상태와 다른 운향자들의 안전을 보호하기 위해 운향 중이거나 차전기를 타고 이동할 시에는 헤드폰 착용을 삼가 해 주십시오.

⚠ Sicherheitshinweis!

Um Ihre persönliche Sicherheit zu garantieren, achten Sie bitte darauf, dass dieser Kopfhörer nicht in nächster Nähe (näher als 10cm) zu Ihrem Herzschrittmacher getragen oder aufbewahrt wird.

Klinkenstecker nicht in stromführende Buchsen einführen. Beachtungen Sie Ihre Kinder bei der Benutzung des Geräts. Das Produkt ist kein Spielzeug.

Die Verwendung von Kopfhörern kann bei großer Lautstärke – vor allem im Dauerbetrieb – zur Schädigung des Gehörs führen.

Bei Umschaltvorgängen an Ihrer HiFi-Anlage oder bei Anschluss des Kopfhörers an die Anlage können Knackgeräusche auftreten, die bei hoher Lautstärke das Gehör beeinträchtigen. Drehen Sie daher den Lautstärkeregler immer auf Minimum, wenn Sie an Ihrer HiFi-Anlage zwischen verschiedenen Quellen (Radio, Plattenspieler, CD-Player ...) wählen oder den Kopfhörer anschließen.

Um Ihre Fahrtüchtigkeit und die Sicherheit anderer Verkehrsteilnehmer nicht zu gefährden, verwenden Sie Kopfhörer keinesfalls beim Lenken eines Kfz oder beim Radfahren.

⚠ ¡Atención!

Por su propia seguridad, procure no llevar ni guardar estos auriculares muy cerca de su marcapasos (a menos de 10cm).

No introducir el conector jack en los casquillos conductores de corriente.

Vigile a sus hijos al utilizar el equipo. Este producto no es un juguete.

La utilización de auriculares a un volumen muy alto – sobre todo al utilizarlos durante largos periodos – puede conducir al deterioro del oído.

Al operar los interruptores de su sistema HiFi o al conectar los auriculares al sistema puede hacer clic, lo que a un volumen muy alto puede deteriorar el oído. Por lo tanto disminuya el nivel de volumen al mínimo al seleccionar entre diferentes fuentes (radio, tocadiscos, reproductor de CD...) en su sistema HiFi o al conectar los auriculares.

Para no poner en peligro ni su capacidad de conducir, ni la seguridad de otros usuarios de la vía pública, no utilice en ningún caso sus auriculares al conducir un vehículo o al andar en bicicleta.

⚠ Предупреждение!

В целях гарантии вашей безопасности просим не надевать и не держать наушники вблизи (ближе 10 см) кардиостимулятора.

Запрещается вставлять штекер в электрические розетки.

При использовании прибора присматривайте за детьми, так как это оборудование не является игрушкой.

Прослушивание музыки через наушники на высокой громкости, особенно длительные время, может навредить вашему слуховому аппарату.

Включение и выключение переключателей или подключение наушников может привести к возникновению щелчков, которые на высокой громкости могут нанести вред вашему слуховому аппарату.

Таки образом, всегда устанавливайте громкость на минимальный уровень, прежде чем производить переключение между различными источниками (тuner, диск проигрыватель, CD-проигрыватель и т.д.) или подключить наушники в систему.

Для безопасности дорожного движения не используйте наушники во время езды на велосипеде и вождения автомобиля.

⚠ التحذير!

لضمان سلامتك الشخصية، يرجى عدم ارتداء سماعات الرأس أو الاحتفاظ بها بالقرب من (أقرب من 10 سم) جهاز تنظيم ضربات القلب.

لا تدخل القابس على مأخذ كهربائية.

احرص على الإشراف على الأطفال على الأطقم التي قد تؤثر على مستوى الصوت العالي، خاصة على مدى فترات طويلة، قد يضر بسمك الأذن من خلال سماعات الأذن عند مستويات الصوت العالية، قم دائمًا بتحديد زر التحكم في مستوى الصوت على الحد الأدنى قبل التديل بين المصادر المختلفة (مواالف، قرص ساور، مشغل أقراص مدمجة، إلخ) أو عند توصيل سماعات الرأس من أجل السلامة المرورية، لا تستخدم سماعات الرأس أثناء

⚠ 安全指導事項!

安全のために、このヘッドフォンスメカの近く(10cm以内)で使用または保管することは避けてください。

差込プラグをコンセントに差込まないように入してください。

お子様が使用になる場合は、必ず大人が付き添ってってください。

大きな音量のヘッドフォンの使用は、特に長時間使用する場において聴覚障害の原因となる恐れがあります。

HiFi機器の切り替え時、あるいは機器にヘッドフォンを接続する際に、音量大きい場合にはガリガリという騒音が発生し、聴覚に影響を与える恐れがあります。HiFi機器で各ソース(ラジオ、レコードプレーヤー、CDプレーヤー...) を選ぶ際、あるいはヘッドフォンを接続する際には、音量のつまみを常に最少にしてください。

安全なドライブ、そして他の運転手の安全のためにも、お車を運転する場、あるいは自転車に乗る場合にはヘッドホンは絶対に使用しないでください。

⚠ Ostrzeżenie!

Aby zapewnić sobie bezpieczeństwo, nie należy nosić ani trzymać słuchawek w pobliżu (w odległości mniejszej niż 10cm) od rozrusznika serca.

Nie wkładaj wtyczki do gniazdek elektrycznego.

Nadzorować dzieci podczas korzystania ze sprzętu, produktu to nie zabawka.

Słuchanie w słuchawkach przy wysokich poziomach głośności, szczególnie przez długie okresy czasu, może spowodować uszkodzenie słuchu.

Działanie przełączników w systemie hi-fi lub podłączenie słuchawek mogą powodować mocne impulsy dźwiękowe, które przy dużej głośności mogą powodować podrażnienie słuchu.

Dlatego należy zawsze ustawiać głośność na minimalnym poziomie przed przłączaniem między różnymi źródłami dźwięku (tunerem, gramofonem, odtwarzaczem CD itp.) lub podłączeniem słuchawek.

Dla zachowania bezpieczeństwa s swa jazdy nie należy używać słuchawek podczas prowadzenia samochodu czy jazdy na rowerze.

⚠ Advarsel!

For at garantere din personlige sikkerhed, skal du ikke bære eller holde hovedtelefonerne i nærheden (læstere end 10 cm) af en pacemaker.

Indsæt ikke stikket i stikkontakter.

Overvåg børn ved brug af udstyr, produktet er ikke legetøj.

Hovedtelefoner lte ved høje lydsvrker Navnlig gåbder over længere perioder - kan harskader.

Drften af kontakter på din hi-fi-system eller tilslutte hovedtelefonerne kan forårsage klik der på volumen indstilling højt kan påvirke harseten. Derfor altid indstille lydsvrket til minimum, før der skiftes mellem forskellige kilder (tuner, pladespiller, CD-spiller, etc.) eller tilslutte hovedtelefonerne.

For trafikssikkerheden, ikke anvendes under kørsel eller cykling.

23

24